


Basic Rack Configurations

Front Steer/Rear Steer

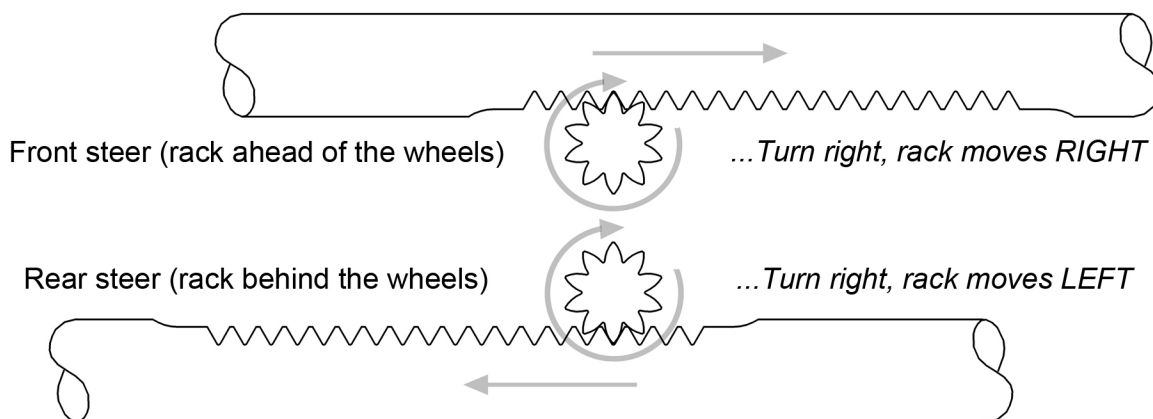

Note that the pinion engages the rack from *underneath* in the case of front steer, and from *above* in the case of rear steer. If this condition is not met, the steering linkage will operate in reverse.

